## Ultimate HVAC Troubleshooting Cheat Sheet

No Heating or Cooling:  Check thermostat settings and batteries Ensure power supply to the unit is on Inspect for blown fuses or tripped circuit breakers Check for gas supply (for gas furnaces) Test for ignition system issues (for gas furnaces) Inspect and replace a faulty compressor or capacitor (for air conditioners) Verify proper airflow and clean or replace air filters	Insufficient Heating or Cooling:  Clean or replace dirty air filters Check for refrigerant leaks and recharge refrigerant levels (for air conditioners) Inspect and clean evaporator and condenser coils Proper insulation and sealing around ductwork Check for blockages in ductwork or vents Verify adequate airflow and adjust blower speed settings Install zoning systems to balance temperatures in different areas
Poor Airflow:  Clean or replace dirty air filters Check for blockages in ductwork or vents Seal leaks in ductwork Verify proper sizing and installation of ductwork Clean or replace the blower motor or fan	High Energy Bills:  Clean or replace dirty air filters  Seal leaks in ductwork  Upgrade to a more energy-efficient HVAC system  Install a programmable thermostat  Regular maintenance to optimize system efficiency
Frequent Cycling On and Off:  Check thermostat settings and adjust temperature differentials  Clean or replace dirty air filters  Inspect and replace faulty thermostats  Ensure proper sizing of the HVAC system  Check for refrigerant leaks and recharge refrigerant levels (for air conditioners)	Strange Odors:  Clean or replace dirty air filters Inspect for mold or mildew growth in ductwork Check for burnt wires or electrical issues Look signs of rodents or animals living in HVAC Remove any debris or foreign objects from the system
Unusual Noises:  Tighten or replace loose or worn belts Lubricate moving parts such as bearings or motors Tighten or replace loose or worn fan blades Clean debris from the fan blades or housing Replace worn or damaged compressor components	Thermostat Malfunctions:  Replace batteries in thermostats Recalibrate or replace faulty thermostats Check for loose or corroded wiring connections  VICE Heating and Cooling
Frozen Evaporator Coils:  Check for restricted airflow and replace air filters Inspect for refrigerant leaks and recharge levels Clean dirty coils that stops heat transfer Issues with the defrost cycle in heat pumps Verify operation of the blower motor and fan	Leaks or Moisture:  Repair or replace damaged condensate drain lines Seal leaks in refrigerant lines Clean and clear condensate drain pans Check for blockages in the condensate drain line